

ILS

NAV VLOC1 Set HSI CRS to XXX	GPS1 APPROACH VLOC1 HDG+NAV
BRG VLOC2	VLOC1 LOC IDENT
AUX GPS2	GPS2 Direct to LOC for DME
Activate approach when cleared to proceed to IAF, or when given first vector	VLOC2 VOR IDENT

LOC BACK CRS

NAV VLOC1 Set HSI CRS to Front CRS HDG	GPS1 APPROACH VLOC1 HDG+NAV GPSS
BRG VLOC2	VLOC1 LOC IDENT
AUX GPS2	GPS2 Direct to LOC for DME
Activate approach when cleared to proceed to IAF, or when given first vector	VLOC2 VOR IDENT

VOR/DME

NAV GPS1	GPS1 APPROACH NAV GPSS
BRG VLOC2	VLOC1 (ILS FREQ.)
AUX GPS2	GPS2 Direct to VOR for DME
Activate approach when cleared to proceed to IAF, or when given first vector	VLOC2 VOR IDENT

RNAV / VOR

NAV GPS1	GPS1 APPROACH NAV GPSS (Use IAF, not vectors)
BRG VLOC2 (Brg to VOR)	VLOC1 (ILS FREQ.)
AUX GPS2	GPS2 Direct to Airport for DME
Activate approach when cleared to proceed to IAF, or when given first vector	VLOC2 VOR IDENT